

Deye Cloud App

Operation Manual for Remote Control

Cuiji Technology (Shanghai) Co., Ltd

Address: No.9, Lane 280, Linhong Road, Changning District,
Shanghai, China



Customer Service Hotline:

Customer Service E-mail:

Plant Page- Remote Control

Step 1 Plant/Device page for Remote Control is available:


- Select a plant and Tap **【Device】** → **【Inverter】** → **【Remote Control】** in sequence into the details page for Remote Control;
- Select a plant and Tap **【Device】**; Select a inverter into it's details page, and tap **【...】** at the top right corner → **【Remote Control】** in sequence into the details page for Remote Control;

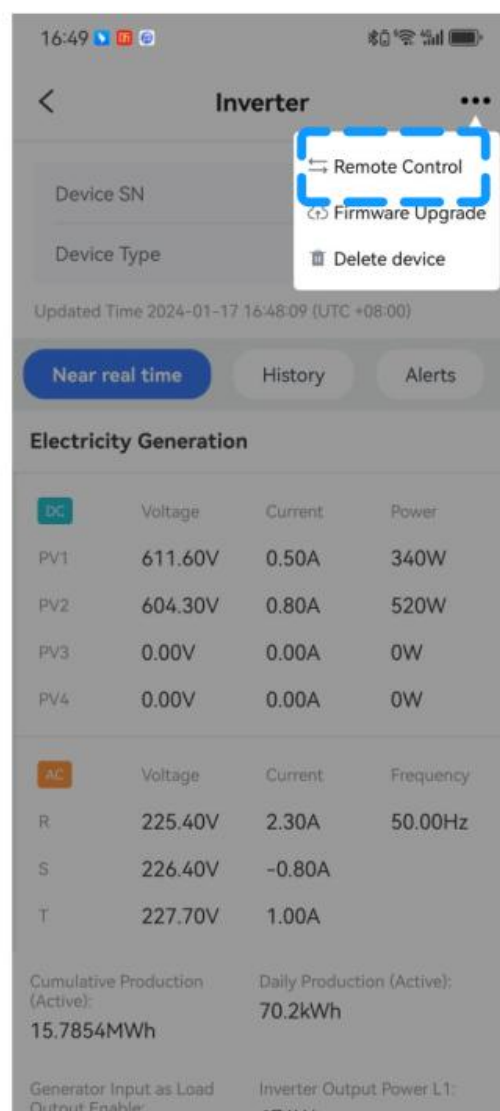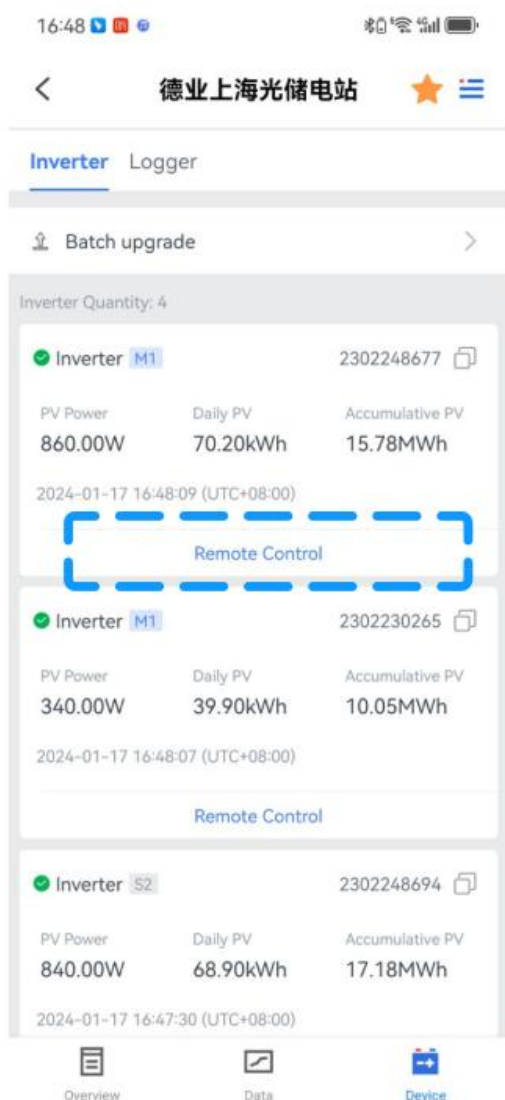

Step 2 Tap **【Batch Command】** to execute batch configure of parameters.
(Battery Setting, System Work Mode-1, System Work Mode-2, Grid Setting, Basic Setting, SmartLoad Setting, Advanced Function-1 and Advanced Function-2 all could be configured)


Command for single module need Read or Setup in sequence; Tap **【Read】** to get the latest parameters on the device; Tap **【Setup】** to send configured parameters to the device.

Notice: **【Read】** operation is required before configuring parameters of System Work Mode-1, System Work Mode-2, SmartLoad Setting and Advanced Function-1.

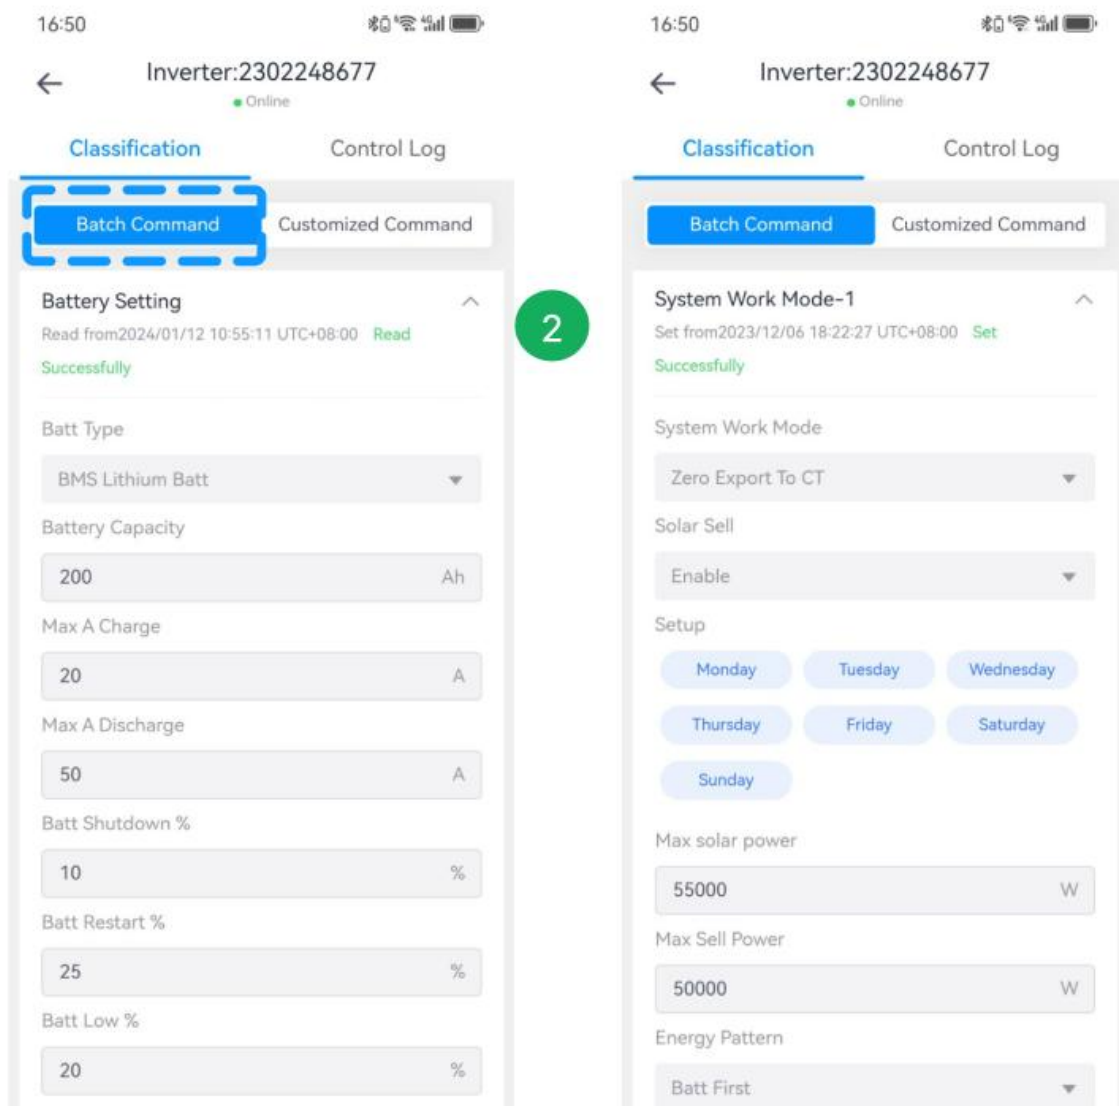

Step 3 Customized command configuration: Tap **【Customized Command】** into the configuration page;

Notice: This command is normally operated by maintenance personnel or platform developers. General users are not involved;

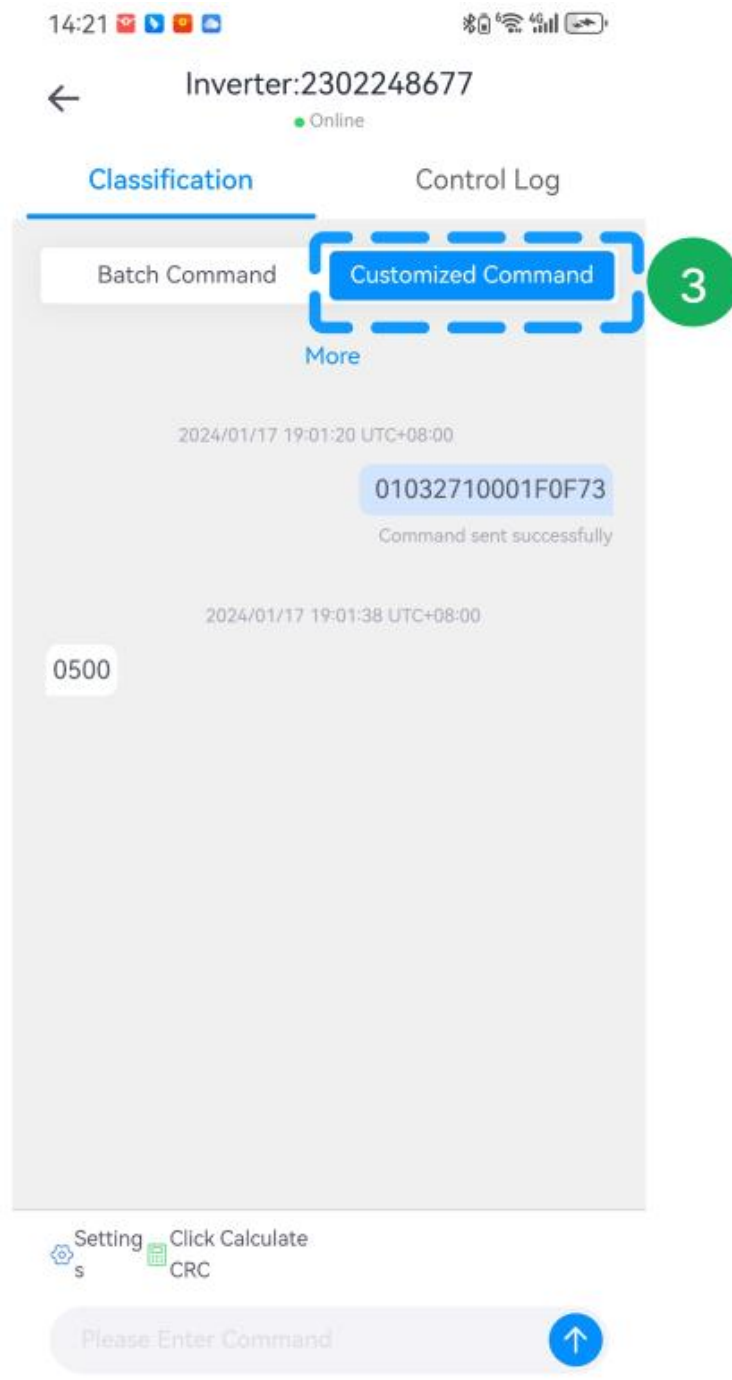


Step 4 Tap **Control Log** and check the log of command operation by the device.




Device Page- Remote Control

Step 1 Plant/Device page for Remote Control is available:

- a. Tap **【 Device 】** into device page, select the device category as **【 Inverter 】** in the upper left corner of the page and tap on **【 Remote Control 】** into the details page for Remote Control;
- b. Tap **【 Device 】** into device page, select the device category as **【 Inverter 】** in the upper left corner of the page; Select a inverter into the device's details page and tap **【 ... 】** in the upper right corner of the page → **【 Remote Control 】** in sequence into the details page for Remote Control;

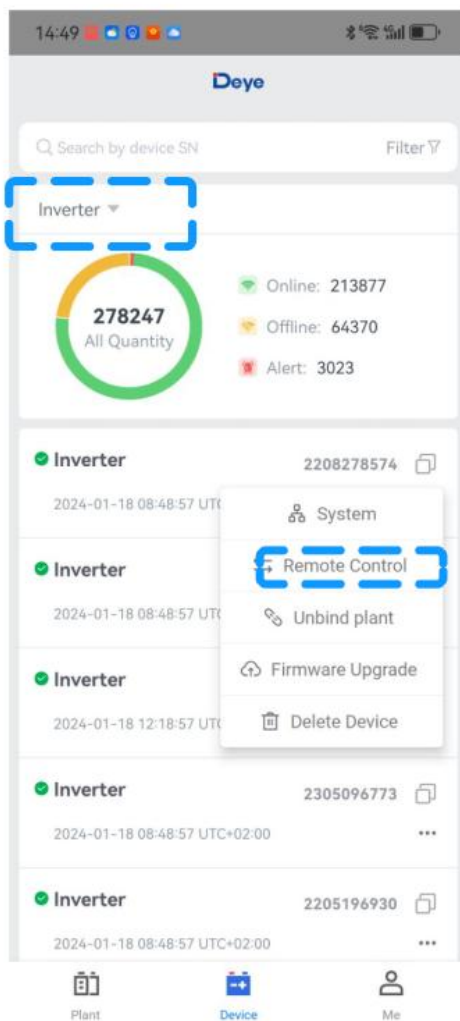


1

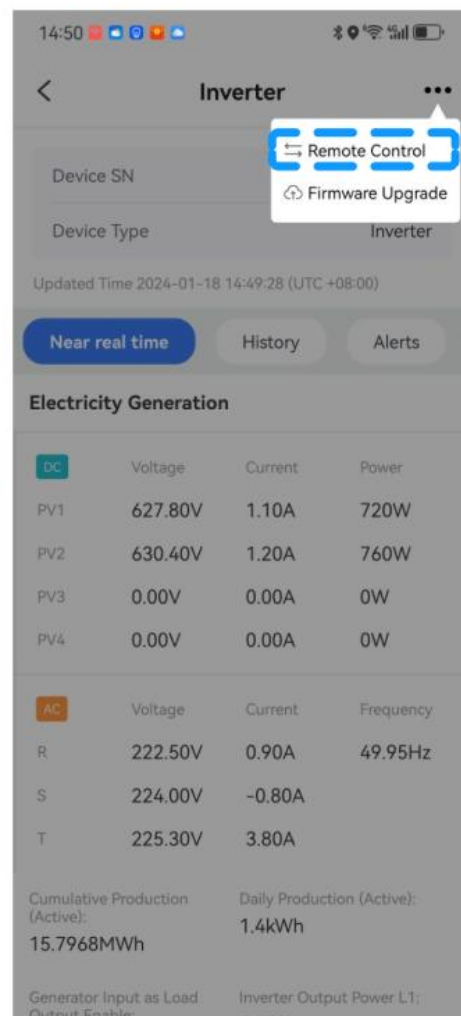

Step 2 Tap **【Batch Command】** to execute batch configure of parameters. Battery Setting, System Work Mode-1, System Work Mode-2, Grid Setting, Basic Setting, SmartLoad Setting, Advanced Function-1 and Advanced Function-2 all could be configured;


Command for single module need Read or Setup in sequence; Tap **【Read】** to get the latest parameters on the device; Tap **【Setup】** to send configured parameters to the device.

Notice: **【Read】** operation is required before configuring parameters of System Work Mode-1, System Work Mode-2, SmartLoad Setting and Advanced Function-1.

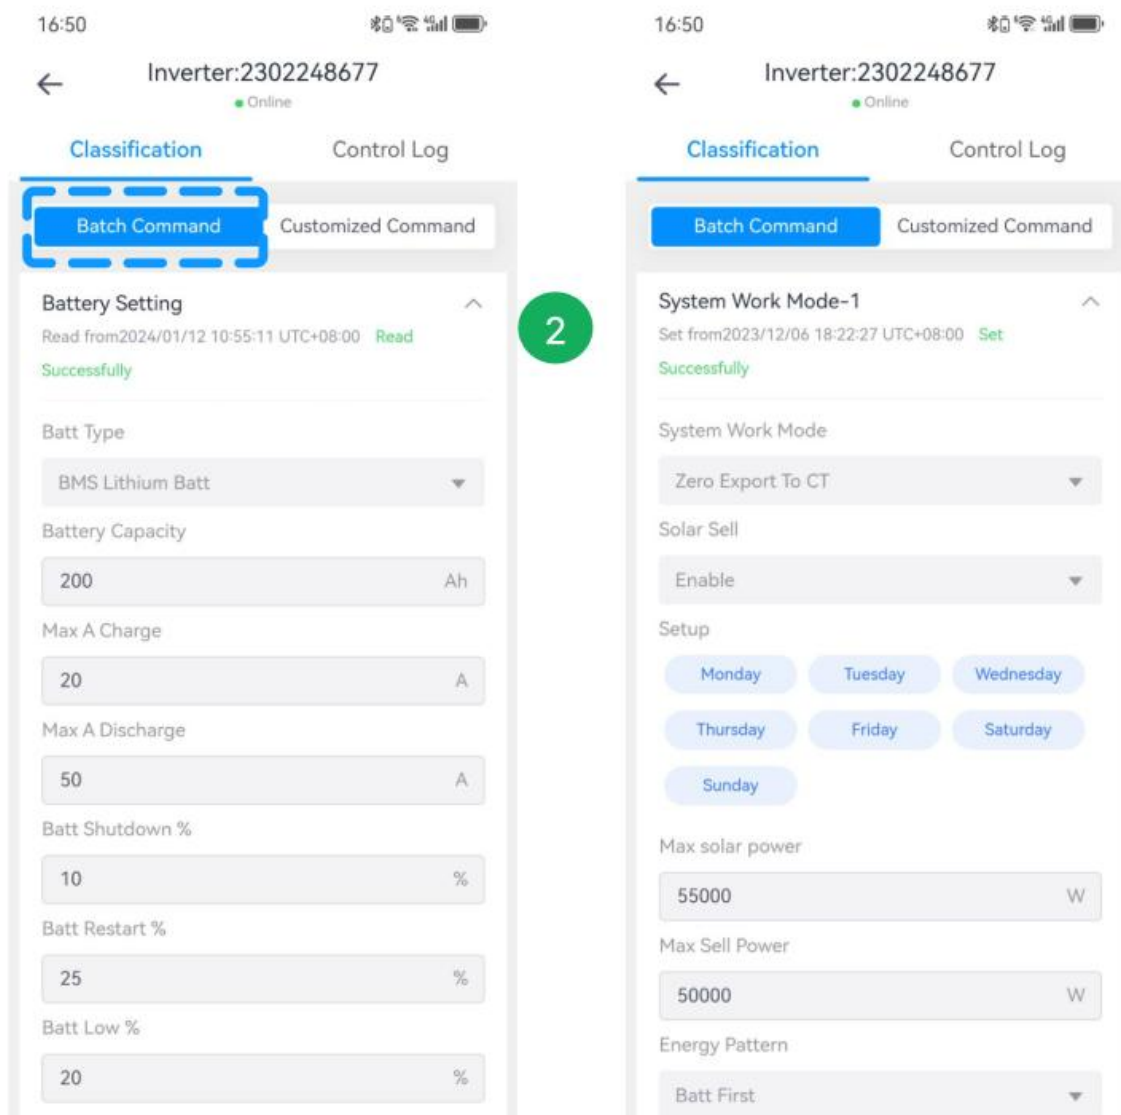

Step 3 Customized command configuration: Tap **【Customized Command】** into the configuration page;

Notice: This command is normally operated by maintenance personnel or platform developers. General users are not involved;

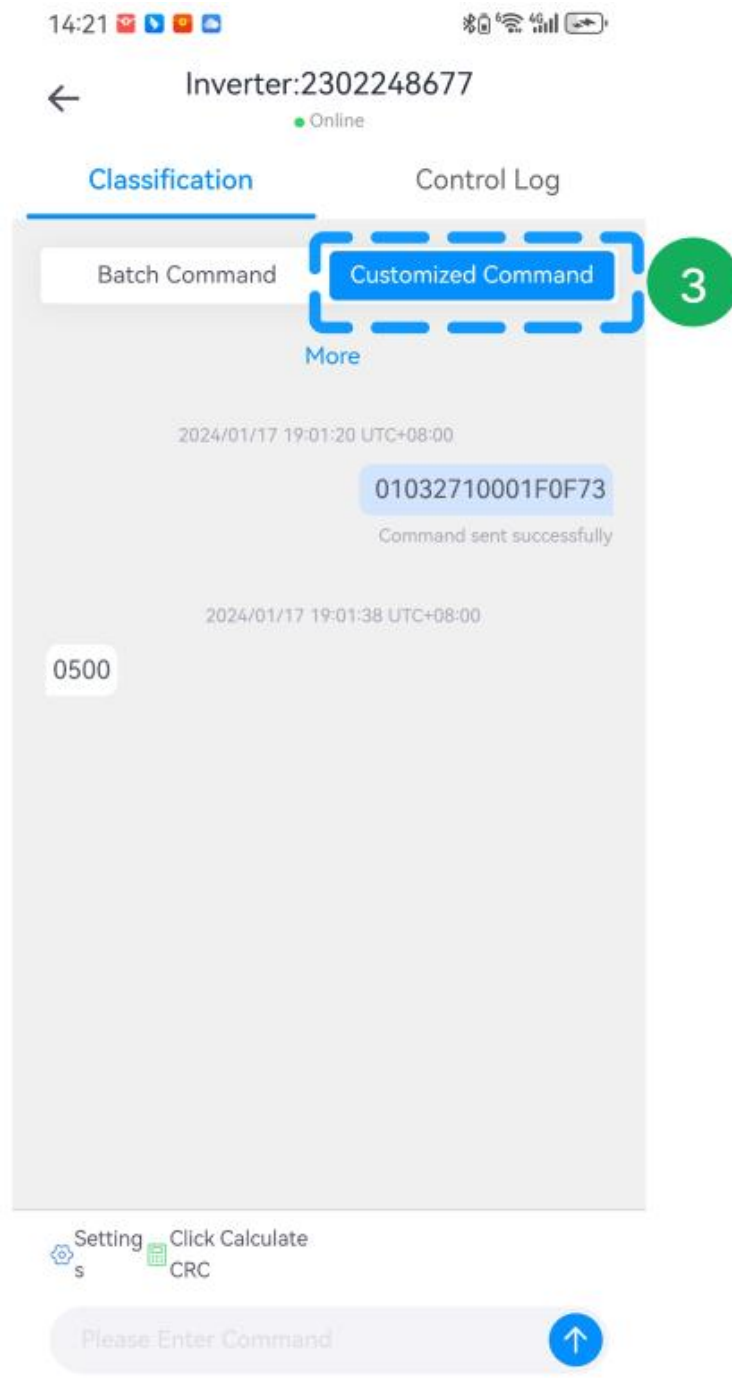

Step 4 Tap **Control Log** and check the log of command operation by the device.

